

ErP Auto Power-Off Status by Models

Brand	Model	Until February 2025	From March 2025
KORG	ARP2600-M	4 hours or Disable	4 hours or Disable (no update)
KORG	AW-4G	20 minutes (cannot be disabled)	20 minutes (cannot be disabled)
KORG	AW-LT100	20 minutes (cannot be disabled)	20 minutes (cannot be disabled)
KORG	AW-OTG/OTB	20 minutes (cannot be disabled)	20 minutes (cannot be disabled)
KORG	B2/ B2SP	30 minutes or Disable	30 minutes or Disable (no update)
KORG	C1 AIR	30 minutes or Disable	20 minutes or Disable
KORG	CA-2	20 minutes (cannot be disabled)	20 minutes (cannot be disabled)
KORG	CA-50	20 minutes (cannot be disabled)	20 minutes (cannot be disabled)
KORG	CM-300	Not applicable	Not applicable
KORG	CM-400	Not applicable	Not applicable
KORG	D1	4 hours or Disable	20 minutes or Disable
KORG	DRUMLOGUE	4 hours or Disable	20 mins, 4 hrs, or Disable
KORG	DS-DAC-10R	Not applicable	Not applicable
KORG	EK-50/EK-50 L (Incl all variants)	4 hours or Disable	20 minutes or Disable
KORG	ELECTRIBE2-BL/ 2S-RD	4 hours or Disable	4 hours or Disable (no update)
KORG	FISA SUPREMA/ FISA SUPREMA C	20 minutes or Disable	20 minutes or Disable
KORG	G1B AIR	30 mins, 1 hr, 4 hrs, or Disable	20 mins, 1 hr, 4 hrs, or Disable
KORG	GA-2	20 minutes (cannot be disabled)	20 minutes (cannot be disabled)
KORG	GA-50	20 minutes (cannot be disabled)	20 minutes (cannot be disabled)
KORG	GA-CS	20 minutes (cannot be disabled)	20 minutes (cannot be disabled)
KORG	GM-1	Not applicable	Not applicable
KORG	GRIPTUNE	20 minutes (cannot be disabled)	20 minutes (cannot be disabled)
KORG	GS-X	4 hours or Disable	20 minutes or Disable
KORG	HD-S	Not applicable	Not applicable
KORG	HEADTUNE HT-U1	20 minutes (cannot be disabled)	20 minutes (cannot be disabled)
KORG	HNDYTRX 1BIT	20 minutes (cannot be disabled)	20 minutes (cannot be disabled)
KORG	HNDYTRX PLAY	20 minutes (cannot be disabled)	20 minutes (cannot be disabled)
KORG	I3 MB/MS	4 hours or Disable	20 minutes or Disable
KORG	IN-EARMETRONOME IE-1M	Not applicable	Not applicable
KORG	KAOSS REPLAY	4 hours or Disable	20 minutes or Disable
KORG	KDM-3	20 minutes (cannot be disabled)	20 minutes (cannot be disabled)
KORG	KEYSTAGE-49/ 61	4 hours or Disable	20 minutes or Disable
KORG	KINGKORG NEO	4 hours or Disable	20 minutes or Disable
KORG	KR-11	20 minutes (cannot be disabled)	20 minutes (cannot be disabled)
KORG	KR-MINI	1 hour or Disable	1 hour or Disable (no update)
KORG	KROME-61/73/88 EX	4 hours or Disable	4 hours or Disable (no update)
KORG	KROSS2-61/61-MB/88-MB	4 hours or Disable	20 minutes or Disable
KORG	L1 (BK Only)	30 minutes or Disable	20 minutes or Disable
KORG	LP-180	30 minutes	20 minutes
KORG	LP-380 U	30 minutes or Disable	20 minutes or Disable
KORG	MA-2	20 minutes (cannot be disabled)	20 minutes (cannot be disabled)
KORG	MICROKEY/ MICROKEY Air series	Not applicable	Not applicable
KORG	MICROKORG MK-2	4 hours or Disable	20 minutes or Disable
KORG	MICROKORG MK1/MK-1S/XL+	4 hours or Disable	4 hours or Disable (no update)
KORG	MICROKORG-CR	4 hours or Disable	4 hours or Disable (no update)
KORG	miniKORG-700Sm	20 minutes or Disable	20 minutes or Disable
KORG	MINILOGUE/ MINILOGUE-XD	4 hours or Disable	20 mins, 4 hrs, or Disable
KORG	MODWAVE MK2	4 hours or Disable	20 minutes or Disable
KORG	MODWAVE-M	4 hours or Disable	20 minutes or Disable
KORG	MONOLOGUE	4 hours or Disable	20 mins, 4 hrs, or Disable
KORG	MONOTRON DELAY/ DUO	Not applicable	Not applicable
KORG	MPS-10	4 hours or Disable	20 minutes or Disable
KORG	MS-20 MINI	4 hours or Disable	4 hours or Disable (no update)
KORG	MULTIPOLY	4 hours or Disable	20 minutes or Disable
KORG	MULTIPOLY-M	4 hours or Disable	20 minutes or Disable
KORG	NANOKEY series	Not applicable	Not applicable
KORG	NANOKEY-FD series	Not applicable	Not applicable
KORG	NANOKONTROL series	Not applicable	Not applicable
KORG	NANOPAD2 series	Not applicable	Not applicable
KORG	NAUTILUS-61/73/88 (Incl AT, AT GR)	4 hours or Disable	20 minutes or Disable
KORG	NTS-1 DIGITAL2	Not applicable	Not applicable
KORG	NTS-2 OSC	Not applicable	Not applicable
KORG	NTS-3 KAOSSPAD	Not applicable	Not applicable
KORG	OPSIX MK2	4 hours or Disable	20 minutes or Disable
KORG	OPSIX-M	4 hours or Disable	20 minutes or Disable
KORG	OPSIX-SE	4 hours or Disable	20 minutes or Disable
KORG	OT-120 (V) <C>	20 minutes (cannot be disabled)	20 minutes (cannot be disabled)
KORG	PA1000/1000 MG	2 hours or Disable	20 minutes or Disable
KORG	PA300	2 hours or Disable	20 minutes or Disable
KORG	Pa5X-61/73/88	2 hours or Disable	20 minutes or Disable

ErP Auto Power-Off Status by Models

Brand	Model	Until February 2025	From March 2025
KORG	PA600	2 hours or Disable	20 minutes or Disable
KORG	PA700/700-OR	2 hours or Disable	20 minutes or Disable
KORG	PB-X-PRO	4 hours or Disable	20 minutes or Disable
KORG	PB-X/ PB-X MINI/ PB-XS	Not applicable	Not applicable
KORG	PianoRec	Not applicable	Not applicable
KORG	PITCHCLIP2 PC-2/PC-2+	20 minutes (cannot be disabled)	20 minutes (cannot be disabled)
KORG	PITCHSTRAP PST-1	20 minutes (cannot be disabled)	20 minutes (cannot be disabled)
KORG	POETRY	30 minutes or Disable	20 minutes or Disable
KORG	PS-3300	4 hours or Disable	4 hours or Disable (no update)
KORG	PU-2	Not applicable	Not applicable
KORG	RK-100S 2BK/RD	4 hours or Disable	4 hours or Disable (no update)
KORG	RP-C2	20 minutes (cannot be disabled)	20 minutes (cannot be disabled)
KORG	SH-CS100	20 minutes (cannot be disabled)	20 minutes (cannot be disabled)
KORG	SH-PRO	20 minutes (cannot be disabled)	20 minutes (cannot be disabled)
KORG	SP-280-BK	30 minutes or Disable	20 minutes or Disable
KORG	SQ-1	4 hours or Disable	4 hours or Disable (no update)
KORG	SQ-64	4 hours or Disable	20 mins, 4 hrs, or Disable
KORG	ST1K	20 minutes (cannot be disabled)	20 minutes (cannot be disabled)
KORG	SV2-73/ 73S/ 88/ 88S	2 hours or Disable	20 minutes or Disable
KORG	TM-70T/C	20 minutes (cannot be disabled)	20 minutes (cannot be disabled)
KORG	VOLCA (all models except VOLCA-MIX)	4 hours or Disable	20 minutes or Disable
KORG	VOLCA-MIX	4 hours or Disable	4 hours or Disable (no update)
KORG	WAVESTATE MK2	4 hours or Disable	20 minutes or Disable
KORG	WAVESTATE-M	4 hours or Disable	20 minutes or Disable
KORG	WAVESTATE-SE	4 hours or Disable	20 minutes or Disable
KORG	WD-X-GLB	4 hours or Disable	4 hours or Disable (no update)
KORG	XE20/ XE20 SP	5 mins, 10 mins, 30 mins, 60 mins, 120 mins or Disable	5 mins, 10 mins, 20 mins, 60 mins, 120 mins or Disable

ErP Auto Power-Off Status by Models

Brand	Model	Until February 2025	From March 2025
VOX	AC10C1	2 hours or Disable	20 minutes or Disable
VOX	AC10HWR1	Not applicable	Not applicable
VOX	AC15C1	Not applicable	Not applicable
VOX	AC15C1X	Not applicable	Not applicable
VOX	AC15C2	Not applicable	Not applicable
VOX	AC15CH	Not applicable	Not applicable
VOX	AC15HWR1X	Not applicable	Not applicable
VOX	AC30C2	Not applicable	Not applicable
VOX	AC30C2X	Not applicable	Not applicable
VOX	AC30CH	Not applicable	Not applicable
VOX	AC30HWR2X	Not applicable	Not applicable
VOX	AC30S1	2 hours or Disable	20 minutes or Disable
VOX	AC4C1-12	Not applicable	Not applicable
VOX	AC4HWR1	Not applicable	Not applicable
VOX	ADIO-AIR-GT/BS	1 hour or Disable	1 hour or Disable (no update)
VOX	Amplug series (incl AP2-CAB)	Not applicable	Not applicable
VOX	BC108	Not applicable	Not applicable
VOX	BC112	Not applicable	Not applicable
VOX	CAMBRIDGE50	1 hour or Disable	20 minutes or Disable
VOX	MSB25	20 minutes or Disable	20 minutes or Disable
VOX	MSB50-BA	4 hours	4 hours (no update)
VOX	MV50	20 minutes or Disable	20 minutes or Disable
VOX	PATHFINDER 10 <K>	Not applicable	Not applicable
VOX	PATHFINDER BASS 10 <K>	Not applicable	Not applicable
VOX	STOMPLAB 1B/1G/2B/2G	1 hour or Disable	1 hour or Disable (no update)
VOX	V-CM-60	4 hours	4 hours (no update)
VOX	V-UKE-50	4 hours	4 hours (no update)
VOX	V212C	Not applicable	Not applicable
VOX	Valvenergy pedals	Not applicable	Not applicable
VOX	VFS2/2A/3/5	Not applicable	Not applicable
VOX	VGH-AC30/BASS/ROCK	Not applicable	Not applicable
VOX	VMG-3/10/50	1 hour or Disable	20 minutes or Disable
VOX	VOX Wah pedals	Not applicable	Not applicable
VOX	VPT-1	20 minutes (cannot be disabled)	20 minutes (cannot be disabled)
VOX	VT20X/40X/100X	1 hour or Disable	20 minutes or Disable
VOX	VX15-GT	1 hour or Disable	20 minutes or Disable
VOX	VX50-AG/BA/KB	4 hours	4 hours (no update)
VOX	VX50-GTV	1 hour or Disable	20 minutes or Disable
VOX	VXT-1	Not applicable	Not applicable